

PL330 Firmware Upgrade Step

Part one : On Printer

- 1) Press the latch to open the printer top cover. Ref: Fig 01
- 2) Printer top cover open & do not close it. Ref : Fig 02
- 3) Press the " Feed " button and hold it. Ref : Fig 03
- 4) Turn on the " Power Button ", printer will load in to system mode. Ref : Fig 04
Remark : Printer will beep sound.



Fig 01



Fig 02



Fig 03

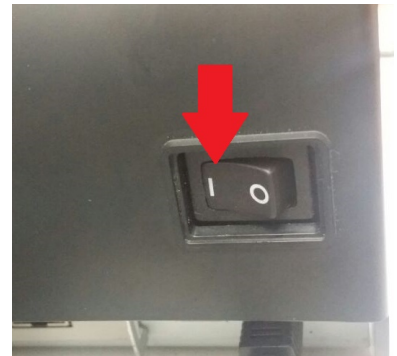


Fig 04

Part two : Update firmware software.

- 1) Make sure printer driver is installed and can print.
- 2) On update tool, Select the Printer driver in use. Ref : Fig 05
- 3) On " Select " button, browse the update file. Ref : Fig 05
- 4) After select, Click " START " to start update firmware.

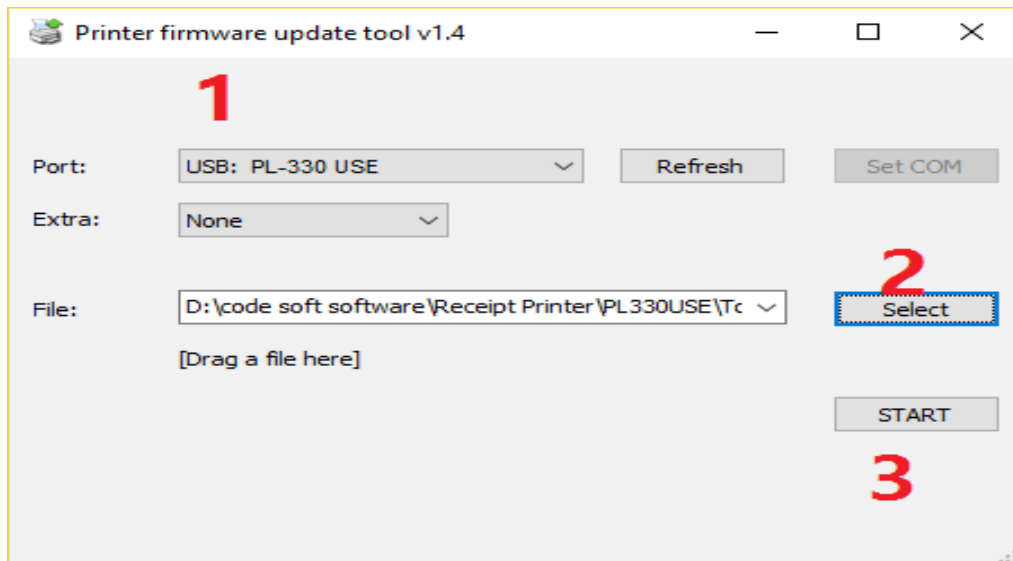


Fig 05