

TP-3260VL Technical Manual

Change main board

- 1) Unscrew Bottom cover. Ref: Fig 01
- 2) Unplug all the cable Ref: Fig 02
- 3) Unscrew three screw. Ref: Fig 03
- 4) Remove the mainboard. Ref: Fig 04

Change power switch

- 1) Turn off the power switch. Ref: Fig 05
- 2) Two clip on left and right, push the two clip and push it out from inside. Ref: Fig 06
- 3) Power button. Ref: Fig 07

Remove front cover and top cover.

- 1) Push the Open button. Ref: Fig 08
- 2) Open the front cover. Ref: Fig 09
- 3) on left right have two spring, remove it and open the clip. Ref: Fig 10



Fig 01



Fig 02



Fig 03



Fig 04



Fig 05

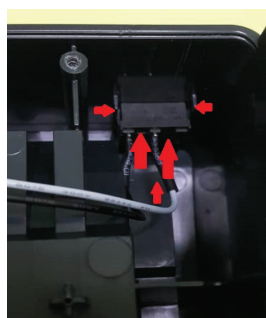


Fig 06



Fig 07



Fig 08



Fig 09



Fig 10

CODE SOFT INTERNATIONAL INFORMATION CO. LTD

Room 319,Block C,The NEW Generation Info Tech Park,Chuangye Road NO.139, Bao'An District, Shenzhen ,P.R.China.

Tel : +86-755 86539210 Email : info@code-soft.com Website : www.code-soft.com

Change 2nd cutter and roller.

- 1) Open two Screw to remove the whole module. Ref : Fig 11
- 2) On module unscrew two screw. Ref : Fig 12
- 3) 2nd cutter remove. Ref : Fig 13
- 4) On roller, push the gear to right hand side, Ering and roller can remove together. Ref : Fig 14
- 5) Roller set. Ref : Fig 15

Change cover spring and panel board.

- 1) unscrew one screw. Ref : Fig 16
- 2) Spring is remove. Ref : Fig 17
- 3) On panel board, unscrew two screw. Ref : Fig 18
- 4) Panel board is remove. Ref : Fig 19

Remove Chassis and Cover button.

- 1) Unscrew three screw and push the chassis to internal side. Ref : Fig 20
- 2) Chassis is remove. Ref : Fig 21
- 3) Unscrew one screw. Ref : Fig 22
- 4) Cover button is remove. Ref : Fig 23

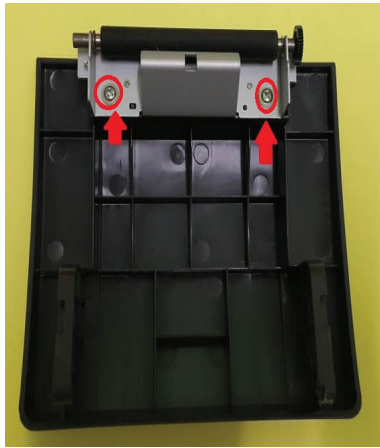


Fig 11



Fig 12



Fig 14



Fig 13



Fig 15



Fig 16



Fig 17

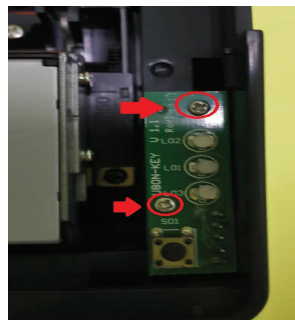


Fig 18

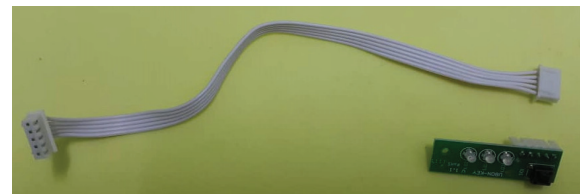


Fig 19

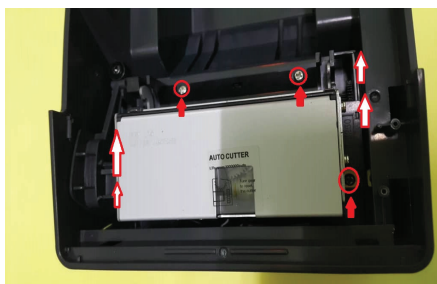


Fig 20



Fig 21

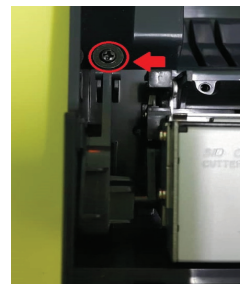


Fig 22



Fig 23

Change main cutter.

- 1) On top Chassis have cutter bracket and main cutter. Ref: Fig 24
- 2) Left and right have 4 screw, unscrew it. Ref: Fig 24
- 3) On bottom Chassis have three screw, unscrew it. Ref: Fig 25
- 4) Cutter is remove. Ref: Fig 26
- 5) Cutter bracket is remove. Ref: Fig 27

Change print head.

- 1) Remove the plastic cover at the chassis. Ref: Fig 28
- 2) Remove the two gear. Ref: Fig 29
- 3) Remove the E-ring. Ref: Fig 30
- 4) After remove E-ring, steel bar can push it out. Ref: Fig 31
- 5) Behind print head have three spring, remove it. Ref: Fig 32
- 6) Print head is remove. Ref: Fig 33



Fig 24

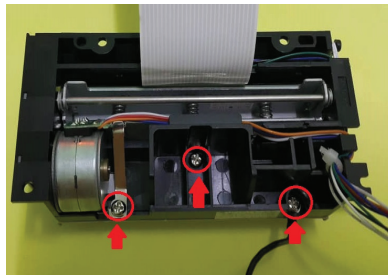


Fig 25



Fig 26



Fig 27



Fig 28

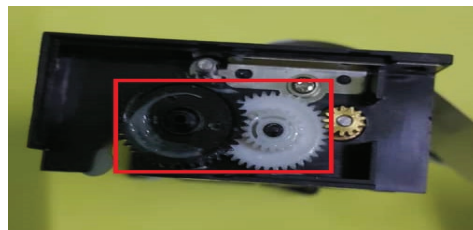


Fig 29



Fig 30

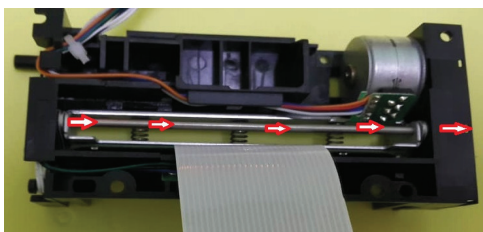


Fig 31

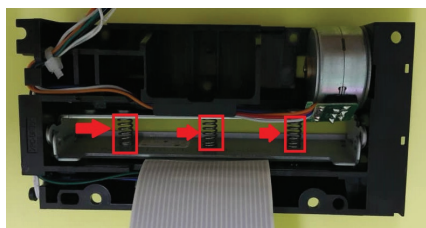


Fig 32



Fig 33