

How to upload program to MPT-9002

- 1) Please connect the device to computer and turn on .
- 2) Run the CODE SOFT APPLICATION GENERATOR software. Ref: Fig 01
 - A. Open File.
 - B. Select the File.
 - C. Click " OK " button.
- 3) On PDT collector. Please do setting as below and plug in to cradle. Ref: Fig 02.
 - A. Select " Utilities "
 - B. Selectr " Load Application "
 - C. Plug in to cradle.

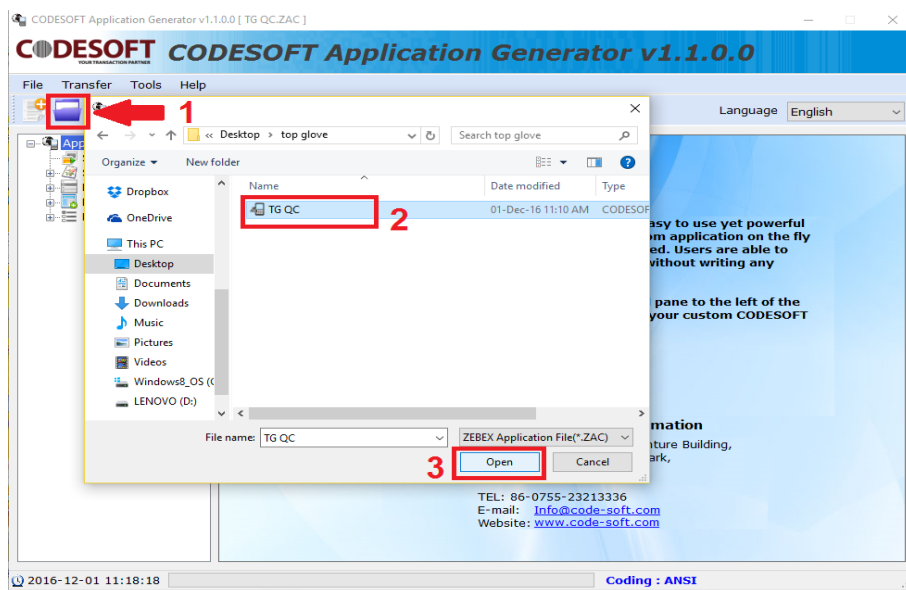


Fig 01



Fig 02

- 4) A. Select " Send Application" Ref : Fig 03
 - B. Make sure all the communication port.
 - Remark : If know which port in use, you can select it.
 - If do not know which port in use, please select Auto.
 - C. Press " Start Download " button.
- 5) After download complete. Please test scan the barcode. Ref: Fig 04

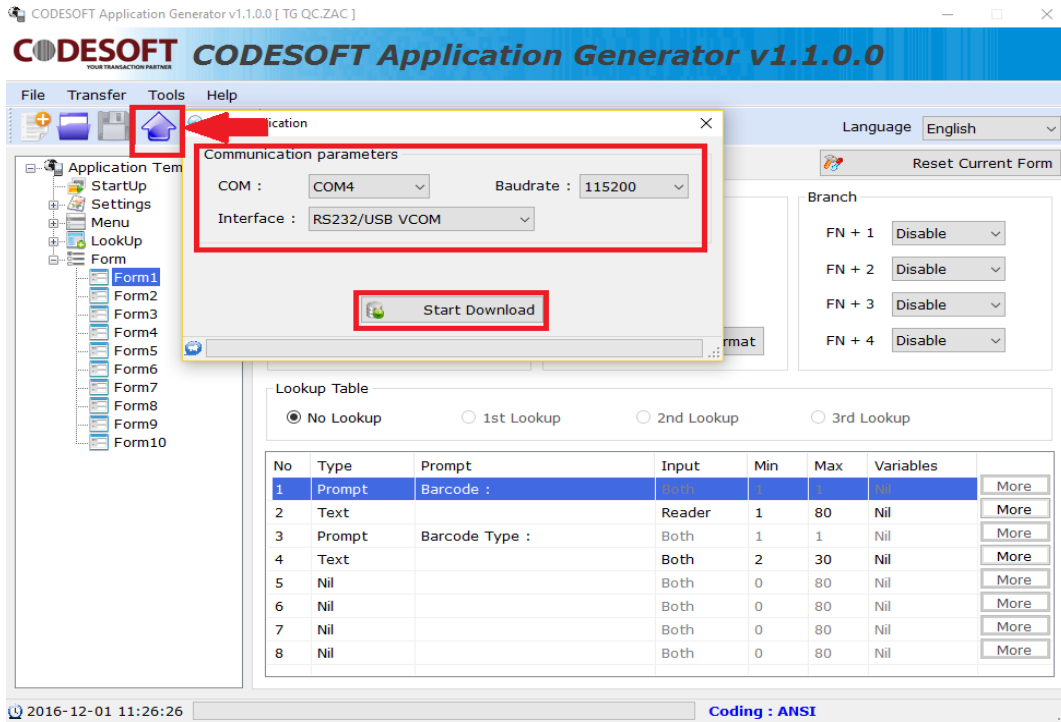


Fig 03

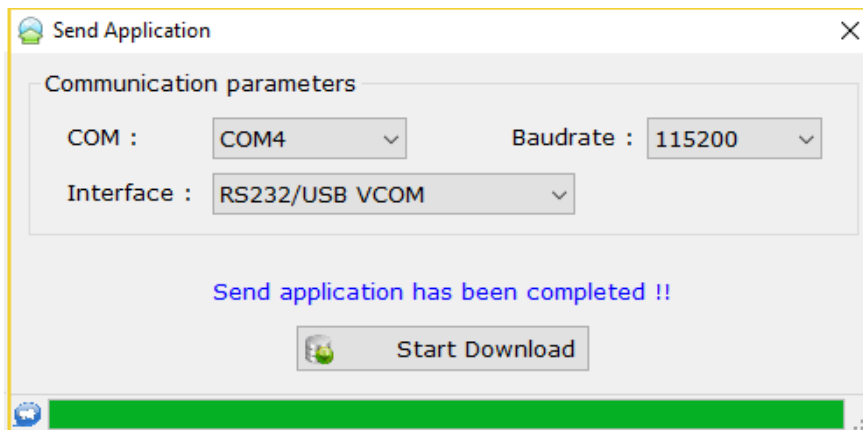


Fig 04